
1/4-DIN & 1/8-DIN **PROCESS CONTROLLER CONCISE PRODUCT MANUAL (59223-4)**


NOTE: Set all Configuration Mode parameters and Set Up Mode parameters as desired before starting normal operations.

Single Setpoint Operation

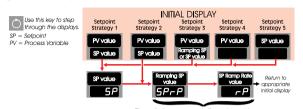

These displays appear only if setpoint ramping is not disabled. The Ramping SP value cannot be adjusted and only appears if SP Ramp Rate is not zero. SP Ramp Rate is entered in eng units per hour.

Dual Setpoint Operation

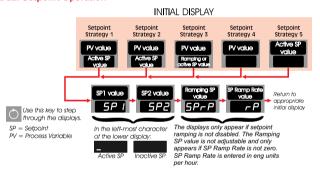

Adjusting Setpoint and Setpoint Ramp Rate

Select the display (see above) and then use the Raise and Lower keys to change the displayed value. NOTE: In Setpoint Strategy 2, the initial display allows setpoint adjustment.







Alarm Indication and Status Display When any alarm is active, the ALM indicator will flash and the Alarm Status display may be accessed as follows:



NOTE: This display appears only if one or more alarm(s) are active.

KEY

Blank = Alarm 1 active

- = Alarm inactive = Loop Alarm active
- - = Alarm 2 active

Error/Fault Indications

Input Over-range

Input Under-Range





Manual Control (PoEn = 1 - See SET UP MODE)

To select/de-select manual control, press the Auto/Manual key (see right). The SET indicator will flash continuously in Manual Control mode. The Raise/Lower keys may then be used to adjust the output power.





Pre-Tune and Self-Tune

Pre-Tune sets the Controllers PID parameters approximately; Self-Tune may then be used to optimise the tuning.

To engage:

With Controller showing a normal Operator Mode display:

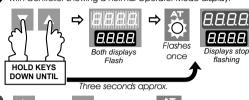

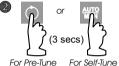



Flashing = Pre-Tune engaged ON = Self-Tune engaged

To dis-engage:

Use same key sequence: ⇒


If both Pre-Tune and Self-Tune are engaged, AT will flash until Pre-Tune is finished, then turn fully on.



NOTE: Pre-Tune will not engage (a) if the setpoint is ramping, (b) if the process variable is within 5% of input span of the setpoint or (c) if the proportional band = 0. It is a single-shot routine and is thus self-disengaging. If RPE = 1 (Auto Pre-Tune enabled - see SET UP MODE), Pre-Tune will run for every power-up.

NOTE: Set all Configuration Mode parameters as desired before adjusting Set Up Mode parameters.

Entry/Exit

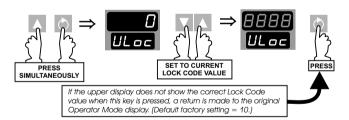

To enter set Up Mode, put the Controller into Operator Mode with normal display, then: To exit Set Up Mode, select the process variable display, then press the simultaneously

NOTE: A return is made to Operator Mode if there is no key activity for two minutes

Set Up Mode Parameter Sequence

Parameter		Adjustment Range	Default
Digital Filter Time Constant	<u>F, LE</u>	OFF, 0.5 to 100.0 secs. in 0.5	2.0 secs.
-		sec. increments	
Process Variable Offset	<u>UFF5</u>	±span of Controller	0
Output 1 Power	uubi	Read only	N/A
	Uytc	Read only	N/A
Proportional Band 1 (PB1)	Pbi	0.0% (ON/OFF Control) to	10.0%
	n, 7	999.9% of input span	
Proportional Band 2 (PB2) 1,5	roc	0.0% (ON/OFF Control) to	10.0%
Reset (Integral Time Constant) 1	-SEL	999.9% of input span 1sec. to 99mins. 59secs. and	F 00-
		OFF	5m 00s
Rate (Derivative Time Constant) 1	<u>rALE</u>	00secs. to 99mins. 59secs.	1m 15s
Overlap/Deadband 1,5	OL	-20% to + 20% (of PB1 + PB2)	0%
Manual Reset (Bias) 1	<u>ь, AS</u>	0% to 100% (Output 1 only);	25%
` '		-100% to +100% (Outputs 1 & 2)	
ON/OFF Differential (Output 1 only) ²	d, F.I		
ON/OFF Differential (Output 2 only) 2.5	하는데	0.1% to 10.0% of input span	0.5%
ON/OFF Differential (Outputs 1 & 2) 2,5	o, rr		
Setpoint High Limit	ゔゟ゙ゖ゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゚゚゚゙ヹ゚ゖ゙゙゙゙゙゙゙゙゙゙゙゙゙	Setpoint to Range Maximum	Range Max
Setpoint Low Limit	5266	Range Minimum to Setpoint	Range Min
Recorder Output Scale Maximum	roPH	-1999 to 9999	Range Max
		-1999 to 9999	Range Min
		0% to 100% of full power	100%
Output 1 Cycle Time	<u> </u>	0.5, 1, 2, 4, 8, 16, 32, 64, 128,	32 secs
(Not with Linear Output)	<i>-,</i> -	256 or 512 secs.	
Output 2 Cycle Time	LEC	0.5, 1, 2, 4, 8, 16, 32, 64, 128,	32 secs
(Not with Linear Output)	L 0 1	256 or 512 secs.	
Process High Alarm 1 value 3	7-61	Range Min. to Range Max. Range Min. to Range Max.	Range Max
Process Low Alarm 1 value ³	L-'' '	Range Min. to Range Max.	Range Min
Band Alarm 1 value 3	<u> </u>	0 to span from setpoint	5 units
Deviation Alarm 1 value 3	<u></u>	±span from setpoint	5 units
Process High Alarm 2 value ³	7-75	Range Min. to Range Max. Range Min. to Range Max.	Range Max
Process Low Alarm 2 value 3	E-25	Range Min. to Range Max.	Range Min
Band Alarm 2 value 3	9-85	0 to span from setpoint	5 units
Deviation Alarm 2 value ³	7525	±span from setpoint	5 units
Loop Alarm Enable	5 BE 0	0 (disabled) or 1 (enabled)	0
Loop Alarm Time 6	-P-L	1sec. to 99mins, 59secs.	99m 59s
Scale Range Decimal Point 4	rhi	0. 1. 2 or 3	1
Scale Range Maximum ⁴		-1999 to 9999	1000
Scale Range Minimum ⁴		-1999 to 9999	0000
Auto Pre-Tune Enable/Disable		0 (disabled) or 1 (enabled)	0
Manual Control Select Enable/Disable		0 (disabled) or 1 (enabled)	0
Setpoint Ramping Enable/Disable	EEEC	0 (disabled) or 1 (enabled) 1. 2. 3. 4 or 5	0
Setpoint Strategy	7F3E	1. 2. 3. 4 or 5	1
		0 (Read Only) or 1(Read/Write)	1
Lock Code		0 to 9999	10
The normal Operator Mode Displays			

setpoint ramp rate) are also available in Set Up Mode. Once the Operator Mode displays have been viewed, the sequence restarts with the first Set Up Mode parameter (Digital Time Filter Contant).

NOTES

- 1. These parameters are not operative if the Proportional Band = 0.
- 2. Switching differential with ON/OFF control output (centered about the
- 3. These parameters are optional; only one legend will appear with each alarm.
- 4. Only applicable if a DC Linear input is fitted.
- 5. Only applicable if Output 2 is fitted and configured as COOL output.
- 6. Only applicable if Proportional Band = 0.
- 7. Applicable only if the Communications Option PCB is fitted and configured (see CONFIGURATION MODE - Option Selection).

DEFAULT INDICATION:

This display indicates that all Set Up parameters have been set to their default values (caused by a change to one or more of the critical Configuration Mode parameters). To clear this display, alter one of the Set Up Mode parameters.

SERIAL COMMUNICATIONS

Refer to the full manual for details of this option, available from your supplier.

1/4-DIN & 1/8-DIN **PROCESS CONTROLLER CONCISE PRODUCT MANUAL (59223-4)**




CAUTION: Installation and configuration should be performed only by personnel who are technically-competent and authorised to do so. Local Regulations regarding electrical installation & safety must be observed

INSTALLATION

Panel-Mounting


The mounting panel must be rigid and may be up to 6.0mm (0.25 inches) thick. The cut-outs required for the Controllers are shown on the right. Controllers may be mounted side-by-side in a multiple installation for which the cut-out width (for n Controllers) is:

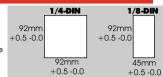

1-DIN Controllers: (48n - 4)mm or (1.89n - 0.16) inches

1-DIN Controllers: (96n - 4)mm or (3.78n - 0.16) inches


For panel-mounting, see below.

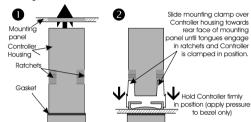



CAUTION: Do not remove the panel gasket; it is a seal against dust and moisture

Rear Terminals

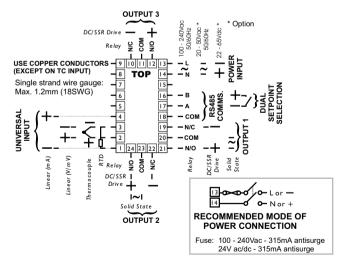

OUTPUT 1: Always primary control (HEAT) output - Relay, SSR Drive, Solid State or DC.

OUTPUT 2: Secondary control (COOL) output - Relay, SSR Drive, Solid State or DC.


Alarm Output - Relay, SSR Drive or Solid State.


OUTPUT 3: Alarm Output - Relay or SSR Drive.


Recorder Output - DC only for setpoint or process variable.

Input/Output Type Selection

To access the link jumpers, REMOVE ALL POWER, grip the side edges of the front panel and pull the Controller out of the housing, noting its orientation. To replace, align the CPU PCB and PSU PCB (see right) with their guides in the housing, then slowly push the Controller into position

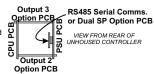

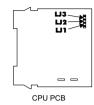

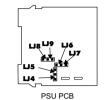


Inpu	Output 2/Output 3 Type				
	Link Jumpers	PCB:	Output Type	LJ Fitted	
Input Type:			DC (0 - 10V)	LJ8	
RTD	None (parked)		DC (0 - 20mA)	LJ9	
DC (mV)	None (parked)	CPU PCB	DC (0 - 5V)	LJ8	
Thermocouple	LÜ3	CPUPCB	DC (4 - 20mA) ₁	LJ9	
DC (mA)	LJ2		. N	И	
DC (V)	LJ1			2	
Output 1 Type:					
Relay	LJ5 & LJ6		ப் ப	В	
Solid State	LJ5 & LJ6		 		
SSR Drive	LJ4 & LJ7	PSU PCB			
DC (0 - 10V)	LJ8	PSO PCB			
DC (0 - 20mA)	LJ9		I		
DC (0 - 5V)	LJ8			\Box	
DC (4 - 20mA)	LJ9		DC Output 2/3 Option PCB		

CONFIGURATION MODE

To enter Configuration Mode from power-up, hold down the A keys until the first parameter () is displayed. Use the same keys to return to Operator Mode. Use the key to select the parameter, use the \(\sqrt{\text{keys}} \) keys to change the value and use the \(\sqrt{\text{ure}} \) key to confirm a new value.

Hardware Definition Code

To display the this Code (see right and following table) from Configuration Mode press the keys. Use the same keys to return to normal Configuration Mode. Adjust and confirm new values as previously described.

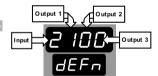

Value	0	1	2	3	4	1 5	7
Input		RTD/	TC	Linear	Linear		
		Linear DC (mV)		DC (mA)	DC (V)		
Output 1		Relay or Solid State	SSR	DC	DC	DC	DC
<u>'</u>		,		(0 - 10V)	(0 - 20mA)	(0 - 5V)	(4 - 20mA)
Output 2 or 3	Not	Relay or Solid State	SSR) DC () DC	DC	` DC
<u>'</u>	fitted	- OP2 only		(0 - 10V)	(0 - 20mA)	(0 - 5v)	(4 - 20mA)
		-					


Option Selection

With the Hardware Definition Code displayed, press the key to display the Option Selection (see right) Use the same key to return to the Hardware Definition Code display. Adjust and confirm new settings as previously described.



Configuration Mode Parameter Sequence

Parameter	Legend	Description	Default
Input Range		Four-digit code (see below this Table)	See below
Output 1 Action	[trl	Reverse-acting	гЕи
Alarm 1 Type		Phi Process High Alarm PLo Process Low Alarm Deviation Alarm Band Alarm Band Alarm Do alarm	P_H I
Alarm 2 Type	ALA2	As for Alarm 1 Type	P_Lo
Alarm Inhibit	Lahi	□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□	nonE

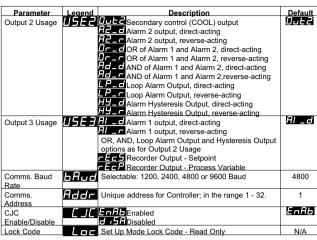

The input ranges available, their codes and default settings are as follows:

The input ranges available, area sease and default seamings are as follower.								
Type	Range	Code	Type	Range	Code	Type	Range	Code
T/C (R)	0 - 1650°C	1127	T/C (K)	-200 - 1373°C	6709	ŔŤD	-149.7 - 211.9°F	2231
T/C (R)	32 - 3002°F	1128	T/C (K)	-328 - 2503°F	6710	RTD	0 - 300°C	2251
T/C (S)	0 - 1649°C	1227	T/C (L)	0.0 - 205.7°C	1815	RTD	0.0 - 100.9°C	2295
T/C (S)	32 - 3000°F	1228	T/C (L)	32.0 - 402.2°F	1816	RTD	32.0 - 213.6°F	2296
T/C (J)	0.0 - 205.4°C	1415	T/C (L)	0 - 450°C	1817	RTD	-200 - 206°C	2297
T/C (J)	32.0 - 401.7°F	1416	T/C (L)	32 - 841°F	1818	RTD	-328 - 402°F	2298
T/C (J)	0 - 450°C	1417	T/C (L)	0 - 762°C	1819	RTD	-100.9 - 537.3°C	7222
T/C (J)	32 - 842°F	1418	T/C (L)	32 - 1403°F	1820	RTD	-149.7 - 999.1°F	7223
T/C (J)	0 - 761°C	1419	T/C (B)	211 - 3315°F	1934	DC Lin	0 - 20mA	3413
T/C (J)	32 - 1401°F	1420	T/C (B)	100 - 1824°C	1938	DC Lin	4 - 20mA	3414
T/C (T)	-200 - 262°C	1525	T/C (N)	0 - 1399°C	5371	DC Lin	0 - 50mV	4443
T/C (T)	-328 - 503°F	1526	T/C (N)	32 - 2550°F	5324	DC Lin	10 - 50mV	4499
T/C (T)	0.0 - 260.6°C	1541	RTD	0 - 800°C	7220	DC Lin	0 - 5V	4445
T/C (T)	32.0 - 501.0°F	1542	RTD	32 - 1471°F	7221	DC Lin	1 - 5V	4434
T/C (K)	-200 - 760°C	6726	RTD	32 - 571°F	2229	DC Lin	0 - 10V	4446
T/C (K)	-328 - 1399°F	6727	RTD	-100.9 - 100.0°C	2230	DC Lin	2 - 10V	4450

Default - each input type has its own default range(s) (shown in **bold type**). NOTE: Changes between input ranges may also require link jumper changes (see



SPECIFICATION UNIVERSAL INPUT

Isolation: Isolated from all outputs (except SSR) at 240V AC.

Input Impedance: **OUTPUTS**

Relay

Contact Type/Rating:

Single pole double throw (SPDT); 2A resistive at 120/240V AC. Lifetime >500,000 operations at rated voltage/current. Isolated from all other

SSR Drive/TTL Drive Canability SSR > 4.3V into 2500 min

Isolation: Not isolated from input or other SSR drive outputs

Solid State

Operating Voltage Range: 20 - 280Vrms (47 - 63Hz) Current Rating:

0.01 - 1A (full cycle rms on-state @ 25°C); derates linearly above 40°C to 0.5A @ 80°C. Isolated from all other inputs/outputs

Greater than 100M Ω resistive, except for DC mA (4.7 Ω) and V (47k Ω)

8 bits in 250mS (10 bits in 1s typical, >10 bits in >1s typical). Resolution:

Isolated from all other inputs and outputs.

OPERATING CONDITIONS FOR INDOOR USE

Ambient Temperature (Operating): 0°C to 55°C Ambient Temperature (Storage): -20°C to 80°C Relative Humidity: 20% - 95% non-condensing

Supply Voltage

100 - 240Vac 50/60Hz (standard) 7.5VA 20 - 50Vac 50/60Hz (option) 7.5VA or 22 - 65Vdc (option) 4W maximum.

ENVIRONMENTAL.

Approvals: EMI Susceptibility: CE, UL, ULC Certified to EN61326 EMI Emissions: Certified to EN61326 Safety Considerations: Complies with EN61010-1 Front Panel Sealing:

PHYSICAL

Depth: 100mm (behind panel) 48mm (1/a-DIN); 96mm (1/4-DIN) Dimensions Front Panel Width

Height Weight: 0.21kg maximum